

## MC-5x38 / MC-2x38 / MC-N2x38

(2010/8/16)

Model		MC-5x38	MC-2x38	MC-N2x38
Functions				
Manual	Power failure memory	V	X	X
	No memory	V	V	V
	Non	V	V	V
Dual output		V	V	X
Heater break alarm		V	X	X
Soft start		V	X	X
Level PID		V	X	X
Transmitter	Transmit PV	V	V	X
	Transmit SV	V	V	X
	Transmit (PV-SV)	V	X	X
	Transmit output percentage	V	X	X
Remote SV		V	V	X
Communication	RS-232	V	V	V
	RS-485	V	V	V
	TTL(Master/Slave)	X	V	X
Program		V (ramp + soak=1 segment x 8sets)	V (2 pattern / 8 segments)	X
Motor Valve Control		V(open loop)	V(close loop)	X
Alarm-3		V(except MC-5438)	V(except MC-2438)	V